



# Standard Uni-Orbital Connector

VT139


## Installation Instructions

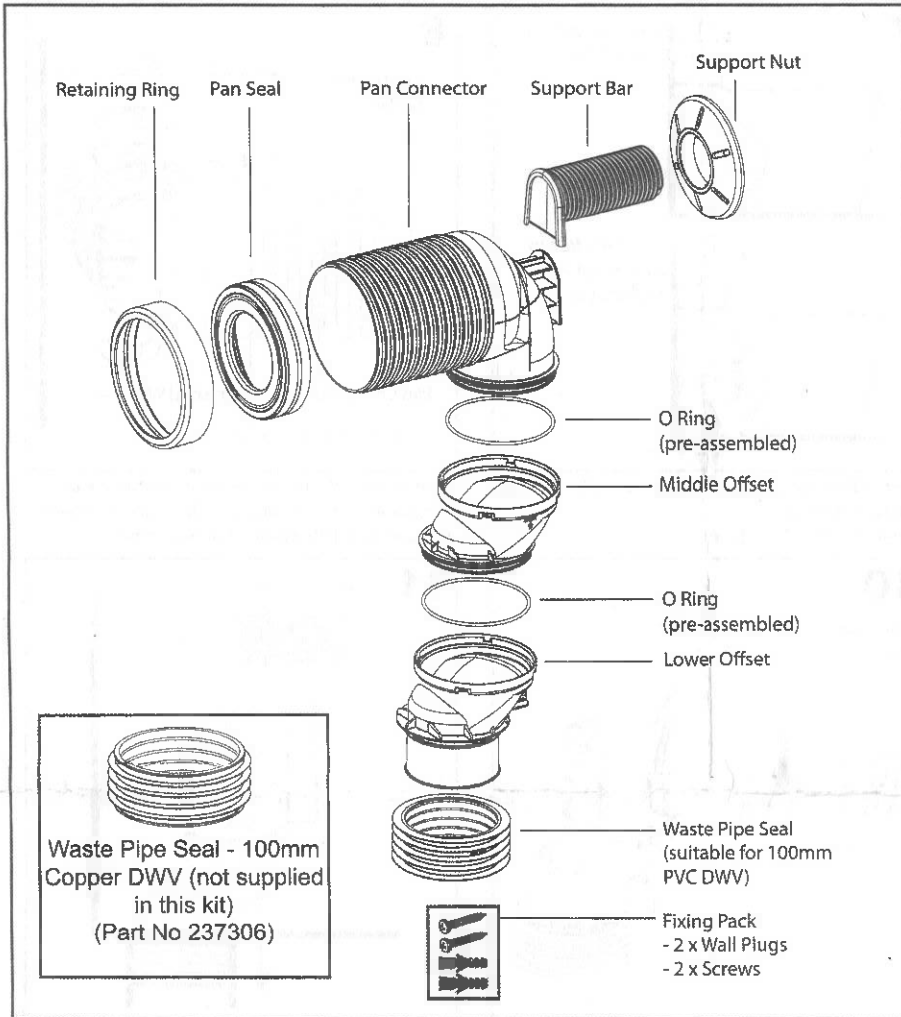


Long Uni-Orbital Connector Contents

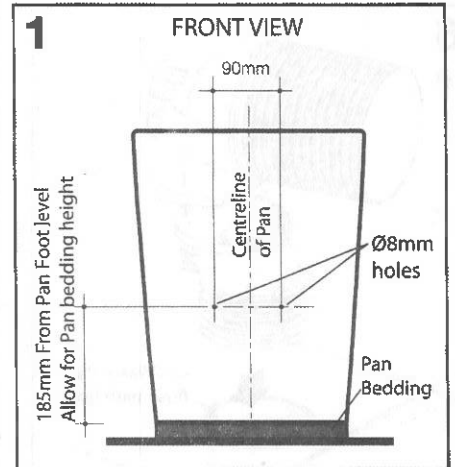


Mark centreline of Pan on wall.  
Drill 2 x Ø8mm holes and insert wall plugs supplied

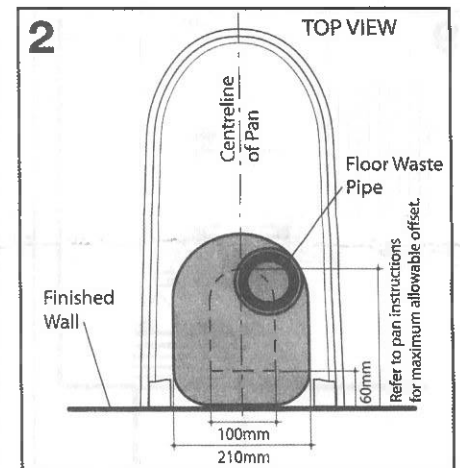


Dotted line indicates maximum offset for Waste Pipe centreline. Floor Waste Pipe must fit within shaded area.

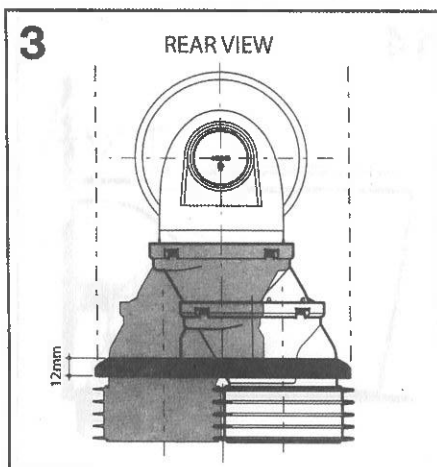

Refer to internal Pan dimensions for maximum allowable offset.

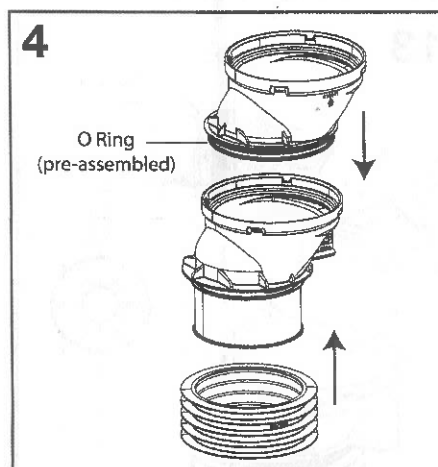

Lubricate O-Ring and clip Lower Offset and Middle Offset together. Lubricate Waste Pipe Seal and slide onto Lower Offset. (Liquid soap is recommended)

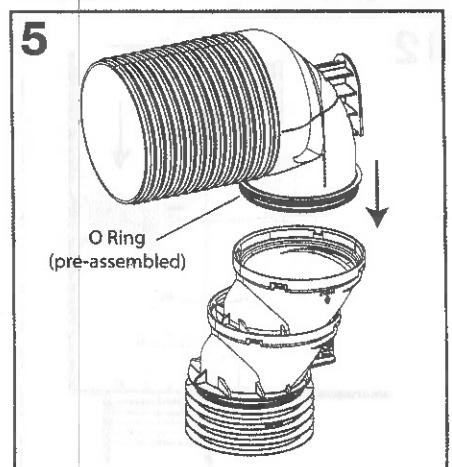


Lubricate O-Ring and clip Pan Connector and Middle offset together.


# Standard Uni-Orbital Connector

VT139


## Installation Instructions

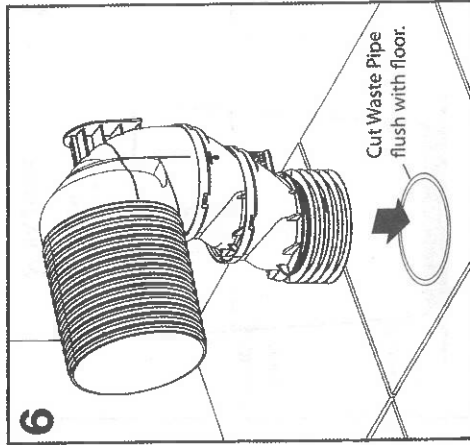


6 Position Uni-Orbital Connector over Floor Waste Pipe without inserting.

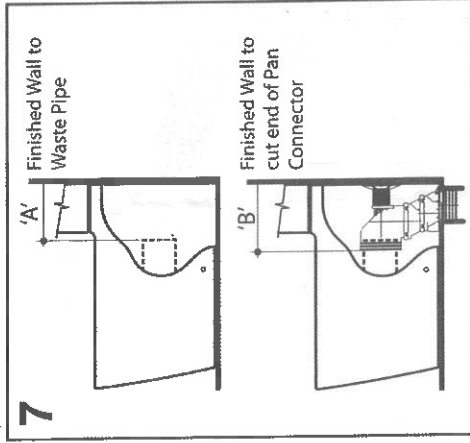


7 Refer to Pan instructions for dimension 'A' - finished wall to Waste Pipe.  
Dimension 'B' = 'A' + 35mm

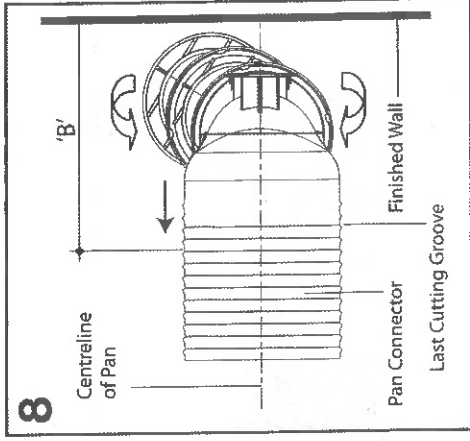


8 Position axis of Pan Connector on centreline of Pan. Rotate forward and bring last cutting groove as close as possible behind dimension 'B'.

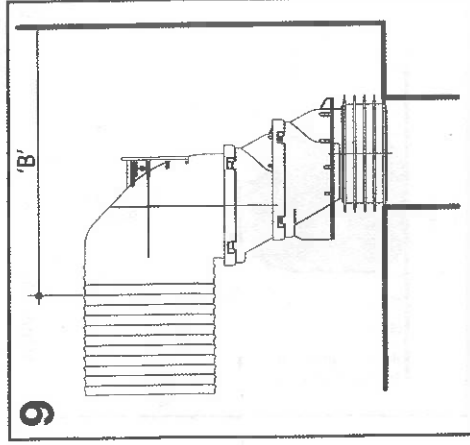


9 Align dimension 'B' with nearest cutting groove leaving at least last 2 ribs visible.  
Cut to length taking care not to move assembly

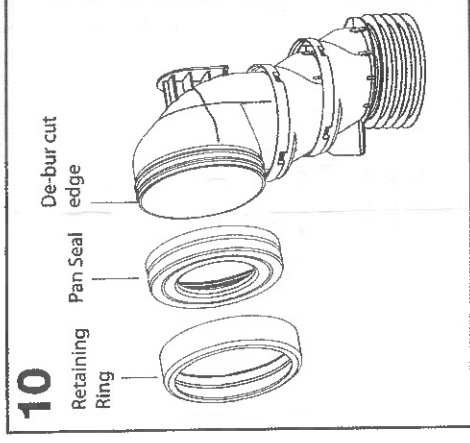


10 De-bur cut edge. Lubricate Pan Seal and push over Pan Connector end.  
Push Retaining Ring over Pan Seal.

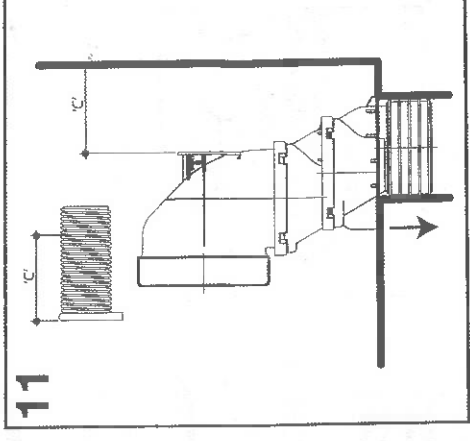

11 Push Uni-Orbital Connector into Floor Waste Pipe. Measure dimension 'C' - Pan Connector to finished wall. Cut Support Bar to length.

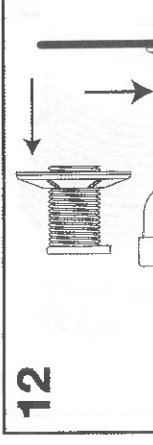

12

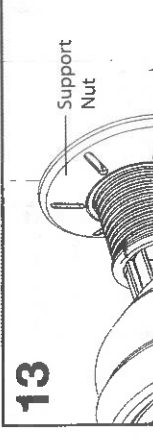

13




14








# Standard Uni-Orbital Connector

VT139

## Installation Instructions

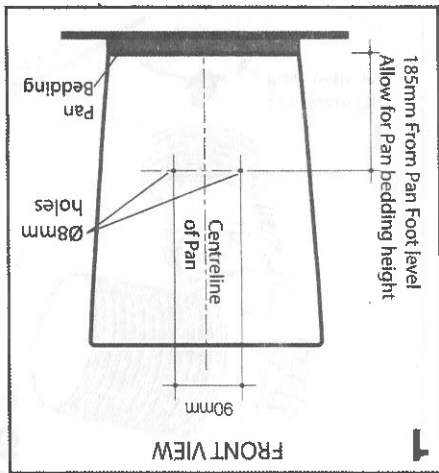

Mark centreline of Pan on wall.  
Drill 2 x Ø8mm holes and insert wall plugs supplied

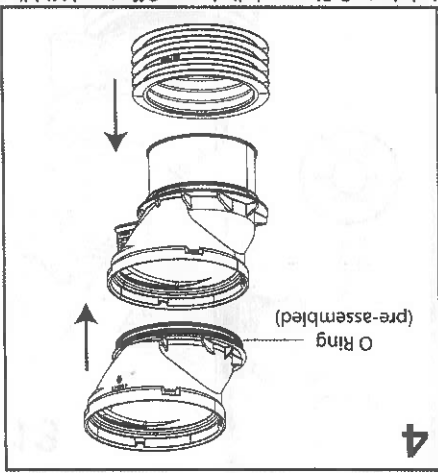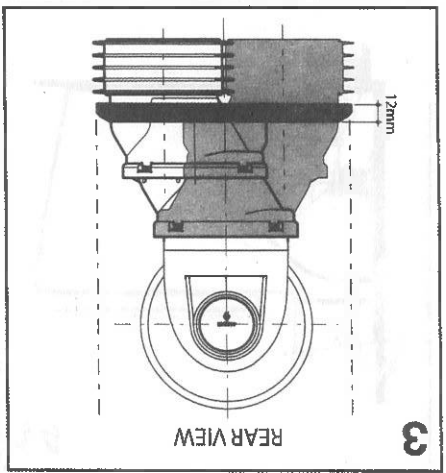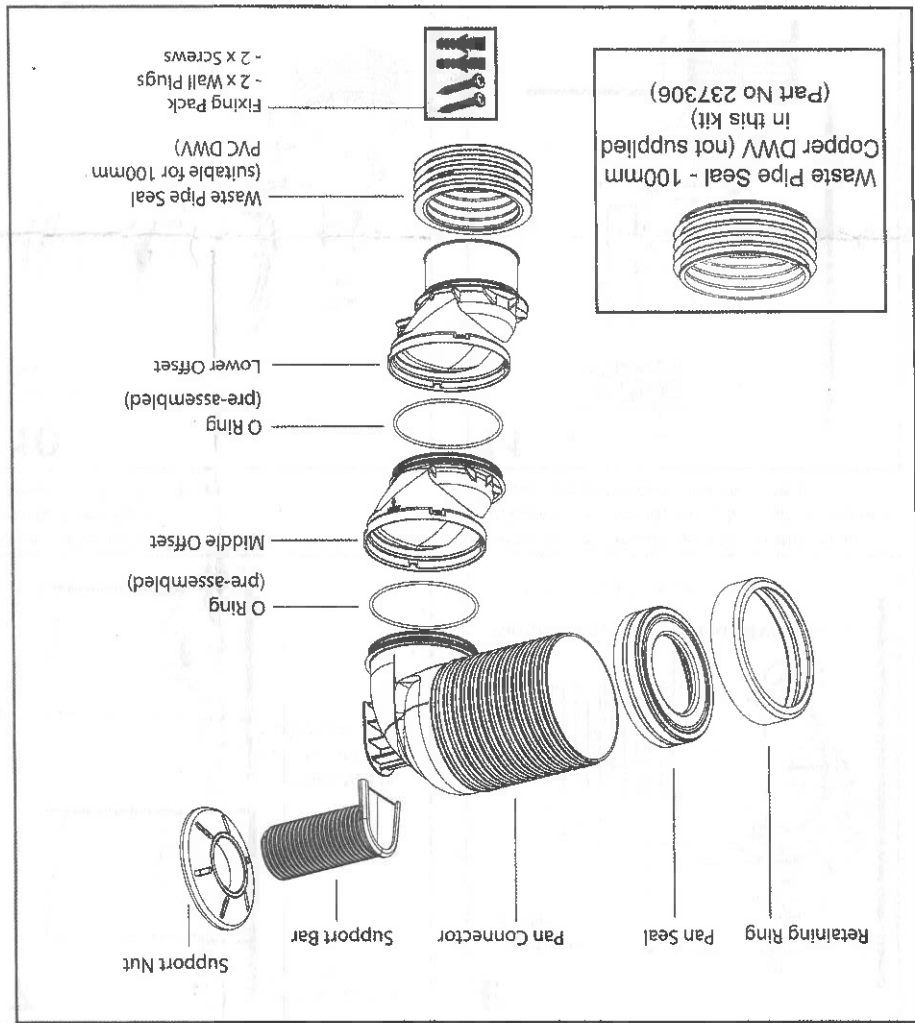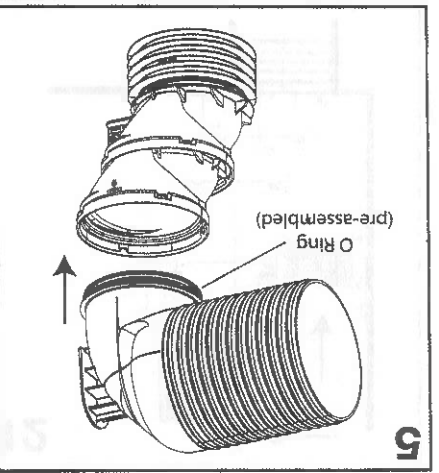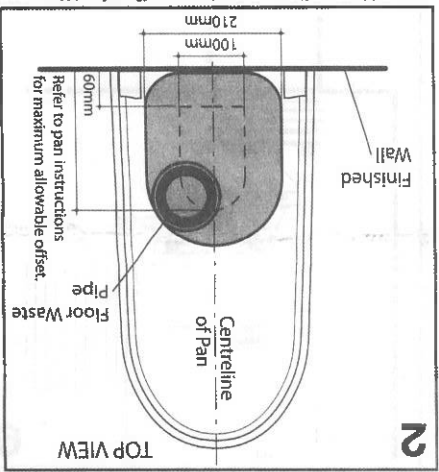

Lubricate O-Ring and clip Lower Offset and Middle Offset together. (Liquid soap is recommended)

Lubricate O-Ring and clip Lower Offset and Middle Offset together. Lubricate Waste Pipe Seal and slide onto Lower Offset. (Liquid soap is recommended)

